

**JUNCTION BOX
FOR ANALOG LOAD CELL
WITH SURGE AND LIGHTNING PROTECTION**

MODEL : US - JBS

JUNCTION BOX IS AN IMPORTANT ACCESSORY OF LOAD CELLS WHICH IS USED FOR ADJUSTING THE BALANCE OF SCALES.

AS THE MATERIAL AND PRODUCING TECHNIQUE'S DIFFERENCE, THE LOAD CELL'S PARAMETER IS DISCREPANCY AND THE SENSITIVITY OF LOAD CELL MAINLY RESULTS IN THE UNBALANCE OF SCALE AMONG MANY PARAMETERS.

HERE WE CAN ADJUST THE SCALE BALANCE BY ADJUSTING THE POTENTIOMETER IN THE JUNCTION BOX.



FEATURES :

- THERE ARE 3 TYPE CONNECTION NUMBER OF LOAD CELL : 4CH , 6CH , 8CH
- MADE BY ALUMINIUM HOUSING(MODEL : JBA) / STAINLESS STEEL(MODEL: JBS) , WITH SPECIAL PLUG, WELL SEALED
- WITH HIGH PRECISION, LOW EXCURSION OF RESISTANCE AND POTENTIOMETER TO CONFIRM THE SYSTEM'S GOOD RELIABILITY
- THERE IS A HOLE THAT COULD BE USED FOR WELDING THE CABLE BESIDES THE CONNECTOR. SO YOU CAN SELECT: CONNECT CABLES BY WELDING OR PLUGGING.
- THE PCB IS WELDED WITH ANTI THUNDER AND ANTI SURGE APPARATUS, IT COULD BE EFFECTIVE TO AVOID THE LOAD CELL AND INDICATOR 'S DAMAGE BY THUNDER AND SURGE.
- OPERATING TEMPERATURE: -40°C~ +85°C
- IP65

OUTLINE DIMENSION IN (mm)



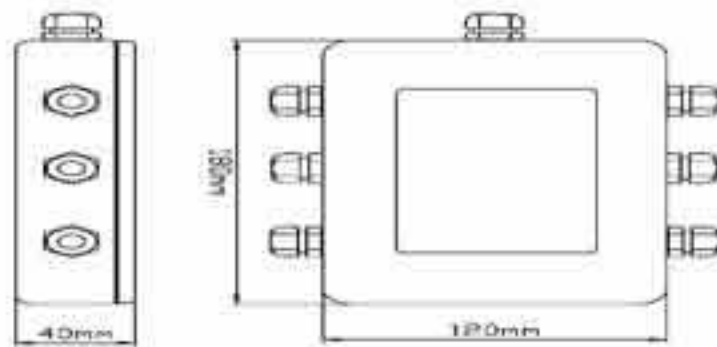 



PHOTO PCB BOARD OF JUNCTION BOX

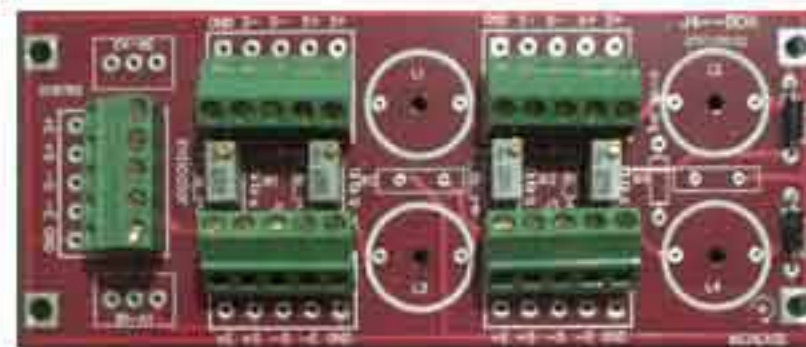 

CONNECTING DRAWING :

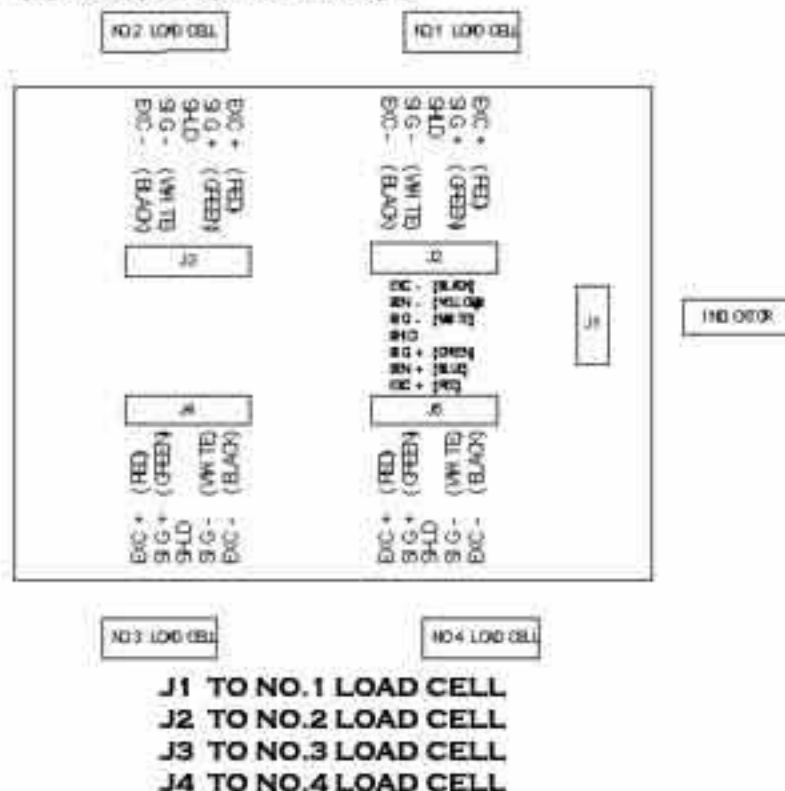 

SCHEMATIC DIAGRAM :

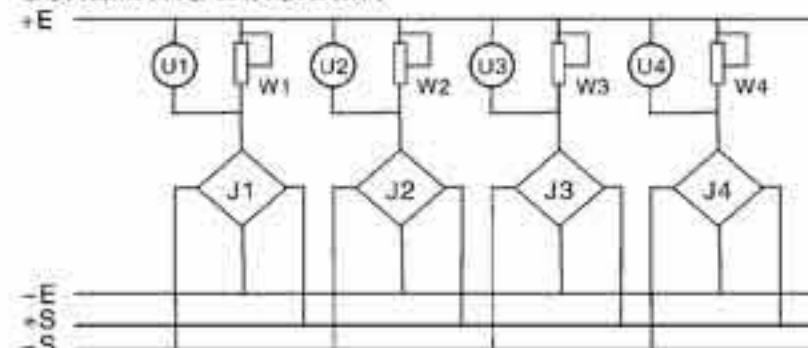 

W: POTENTIOMETER

E: VOLTAGE FOR ARCH BRIDGE

J: LOAD CELL

U: VOLTAGE OF POTENTIOMETER 'S TWO POINT

N: SHOW VALUE OF INDICATOR

$$U_i = ((N_{MAX} - N_{MIN}) + N_{MIN}) \times E \text{ (V)}$$

(I IS THE QUANTITY FROM 2 TO 12)

$$U_i = ((N_{MAX} - N_{MIN}) + N_{MIN}) \times E \times 1000 \text{ (mV)}$$

WARNING: PLEASE CONNECT ACCORD TO THE SHOWING CONNECTING COMPLETELY. THERE ARE FOUR HOLES USING FOR CONNECTING WITH GROUND TO DISCHARGE